




Measuring Tool in the HYPACK® Shell's Area Map

By Roy Goyette

We all have a need to make a measurement in the HYPACK® Shell from time to time and the tools for doing so have been enhanced. The latest versions of HYPACK® now do this with the Measuring Tool located in the tool bars.

To enable the Measuring Tool, select the default cursor in the Screen Controls. If you choose any other tool from the Screen Control bar the Measuring Tool will disappear.

FIGURE 1. Measuring Tool

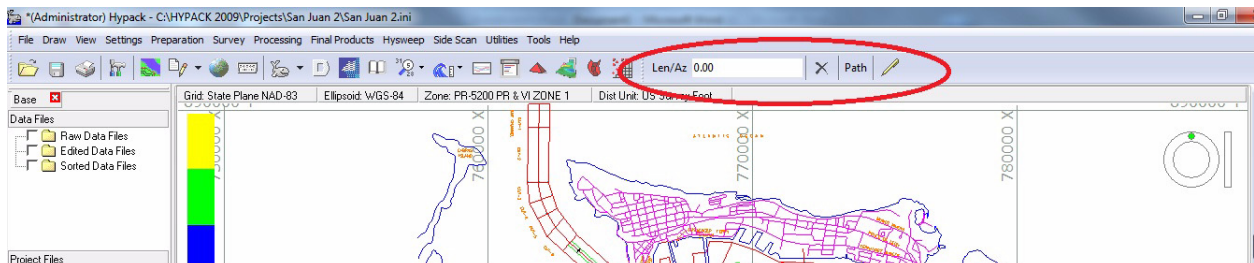

MEASURING DISTANCE AND AZIMUTH BETWEEN POINTS

To measure the distance and azimuth between two points on the area map simply left-click on the first point then drag your cursor to the second point. The length and azimuth between the two points will be displayed in the Len/Az field on the tool bar.

MEASURING A PATH

You can also measure a multi-segmented line with this tool.

1. **Click on the Path button** to the right of the Len/Az field.
2. **Left-click on enough points to establish your path.** The distance along the path will be displayed in the Len/Az field. The azimuth is, of course, of the last segment of the defined path.

FIGURE 2. Measuring a Path

To clear this path and begin another one click the [X] at the end of the Measuring Tool tool bar.

