

Sounding Better!

HYPACK BMP as a Boat Shape in SURVEY

by Christian Shaw

It is possible to use, not only DXF and HYPACK® Boat Shape (*.SHP) files, but also a custom BMP image to display as your boat shape in HYPACK® SURVEY.

There are a few things that need to be in place for this to work properly:

- A BMP image file in your Boat Shapes
 Folder. In my case, I have the following:
 C:\HYPACK
 2018\Boat
 Shapes\Rescue
 Boat.bmp
- A Text file that has same name as BMP image (C:\HYPACK 2018\Boat Shapes\Rescue Boat.Txt) that sets the location of the boat reference point and boat length: Open the BMP in Microsoft Paint, put your cursor at the reference point and note the pixel X and Y coordinate.



Once you have the TXT file and BMP in the Boat Shape folder, open SURVEY and load this shape in the Vessel Setup dialog. (Click the "Vessels" menu.) You must change the file of type from *.shp to *.bmp.

Vessel Setup Map(1) Boat Vessel Display Image: Comparison of the set of	С:\НҮРАС	CK 2018\Boat S	hapes\BOA	T.SHP	✓ Main Vest	sel For Heading	X
 ECDIS Marker Circle Fish 	Opaque	Tran Perimeter Co	lsparent	5.00	Dynamic Dra Damping	ft 0.00 10	×
© Square		Fill Color		Ghost Shape	Dead Reck	oning	
Vessel Track	99 🏷 0.0	Select Vessel S Look in:	hape	apes	-	G 🤌 📂 🛄 -	×
CMG Vector Device Offsets Extend CMG to Edge of W Vessel Label	0 /indow 10	Recent Places Desktop Libraries Computer	Name Shapes Shapes Shapes 6x2.shp 300.shp a2tstes Barge.s BirdOff BOAT.S Cavach Cavach File name: Files of type:	for the Cutter Driver for the ExcavatorSM for the Hopper Drive t.shp hp Prey.shp SHP Michelle Pontoon.sh as Swing Lad Dredge.s	driver r ip ihp	Date modified 7/3/2018 8:54 AM 7/3/2018 8:54 AM 5/11/1999 11:17 AM 9/27/1999 6:34 AM 7/21/2006 12:03 PM 11/1/2010 2:58 PM 1/25/2016 11:29 AM 8/6/1999 6:34 AM 12/10/2014 3:15 PM 6/14/2017 4:37 PM	Type File fol File fol SHP Fi SHP Fi
		78.00		Autocad Files (*.b	dxf) mp)		67

FIGURE 1. Loading the BMP Boat Shape in SURVEY



Survey Logging Line Chart Vessels Matrix Targets Tide Options Window Help	
Map(1)	
Settings Output View Matrix Tools	
Range None -	
28.00 34.00 38.00 42.00 46.00 50.00 54.00 50.00 50.00 50.00 50.00 50.00 51.00 52.00 66.00 70.00 74.00 78.00	イント
453854.95 4945658.19 44d39'46.098" N 063d34'55.486" W 44d39'46.098" N 063d34'55.486" W	

FIGURE 2. The BMP Boat Shape in the SURVEY Map Window